

Satellite Foam Installation Guide



Expanding Foam Mix · Step-by-Step Procedure

RAINBOW TECHNOLOGY
Specialists in Utility Chemicals & Safety Items
www.rainbowtech.net

MATERIALS REQUIRED Safety glasses & gloves · Scissors or utility knife · Expanding foam mix (1 bag)


1 Site Preparation

Dig your hole to 3' deep and 3" diameter. Position the post inside the hole and level and brace it before mixing. Allow no more than 2" of water at the bottom of the hole..



2 Activate the Pouch

Put on safety glasses and gloves. Roll the pouch from blue to purple toward the central burst seal until it ruptures, allowing the two components to combine.

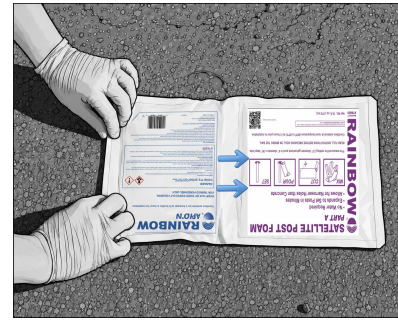



3 Mix Thoroughly

Rub the bag firmly along a 90-degree surface (no sharp edges) 30 times/ 15 seconds , forcing material to travel from one end of the bag to the other with each stroke.



4 Pour Immediately

IMMEDIATELY after mixing, cut one corner of the bag at marked notch and pour the mixed material evenly around the post (wetting it) and into the hole before expansion begins.

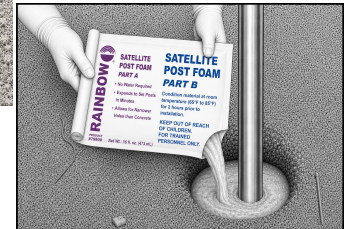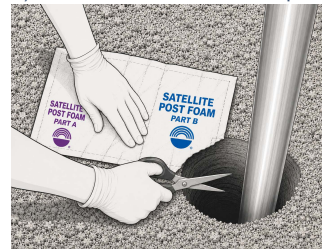

5 Adjust & Allow to Set

Adjust the post if necessary in under 10 seconds. Do not move the post until the material has firmed up — approximately 3 minutes. Allow 15 minutes for the product to set completely before installing the satellite dish,.



6 Clean Up

Remove any excess material from surfaces. Hardened material can be removed with a hand tool.

