



RAINBOW

PRODUCT #
79487

RE-GEL®

RE-ENTERABLE ENCAPSULANT

1 GAL Mixing Instructions

NOTE: Product must be a minimum of 40°F (4°C) before mixing

1. Remove all contents from the Pail:
 - Part A Bag
 - Part B Jug
 - Mixing Stick
 - Disposal Bag
2. Remove the screw cap from the container of Part B (Jug) and pour into the empty pail (Figure 1).
3. Remove the plug from the container of Part A (Bag) and pour contents into the pail containing Part B (Figure 2).
4. Mix the two components in the pail using the provided 10" wooden mixing stick (Figure 3).
5. Mix for approximately 30 seconds to ensure that Part A and Part B are mixed together thoroughly. Be sure to scrape sides and bottom of pail to get all material incorporated.
6. Pour the encapsulant immediately after mixing is complete.
7. Disposal should be in accordance with Local, State, and Federal regulations.

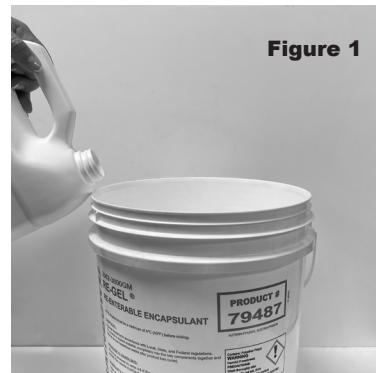


Figure 1

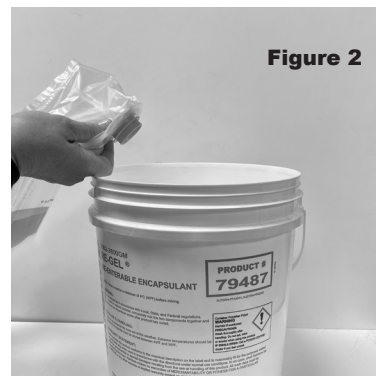


Figure 2

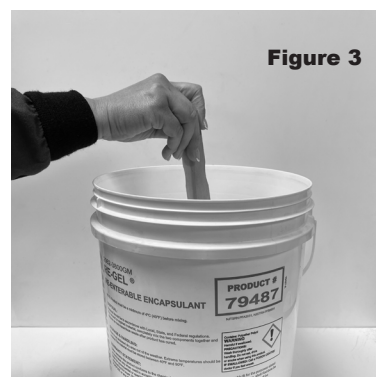


Figure 3

UNUSED OR EXPIRED MATERIAL

Completely mix the two components together and dispose as non-hazardous waste after product has cured.

Manufactured by H.B. Fuller for:

© RAINBOW TECHNOLOGY
261 Cahaba Valley Parkway,
Pelham, AL 35124-1146

COMMENTS OR
SUGGESTIONS?
1.800.637.6047
rainbowtech.net