

# DUCT SEALING FOAM KIT

Single Barrel - 6 oz

Q-TEL 2032R


RECOMMENDED STORAGE TEMPERATURE: 75°F  
DO NOT OPEN THIS BAG UNTIL READY TO USE

PRODUCT:

## INSTALLATION INSTRUCTIONS:

**NOTE:** After mixing, immediately remove mixing rod from cartridge.

1. Wipe out loose dirt and grime from inside of duct and from cable sheath. Center cable(s). Wrap one or two pieces of foam packing around the cable snugly. Using the ramrod, push the packing approximately 6" (for 6 oz) or 3" (for 2 oz) into the duct. Ensure the foam packing fits snugly between the cable and the duct. For multiple cables or inner ducts, ensure that all gaps are blocked with small pieces of packing foam.
2. For larger cables, support the cable near the opening using a cable spacer to provide sufficient space for the Duct Sealing Foam to expand around the cable.
3. Wrap the other piece of foam packing around the cable, placing the nozzle in between the packing while wrapping. Push the packing into the duct, flush with its face.
4. Mix and inject the cartridge of Duct Sealing Foam.
5. Follow similar procedure for duct without cables.

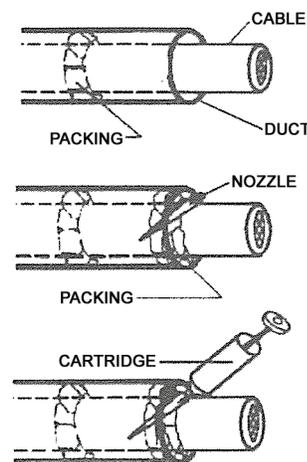

## MIXING AND DISPENSING INSTRUCTIONS:

1. Read all instructions prior to mixing.
2. Pre-condition product between 50°F and 85°F before mixing.
3. **WEAR SAFETY GLASSES AND PROTECTIVE GLOVES.**
4. Hold the cartridge with the red end cap facing up and squeeze the cartridge in the area around the plunger. Squeeze below the red end cap to loosen the plunger.
5. Check the mixing rod to ensure that it isn't overly tight or loose. Turn counterclockwise to loosen, then clockwise to re-tighten snugly.
6. Remove the tape band from the cartridge.
7. Pull the mixing rod up to the top of the cartridge.
8. Squeeze the cartridge in the area of the removed tape band to deform the foil barrier.
9. Push the mixing rod all the way in to the bottom of the cartridge.
10. In a clockwise motion, mix rapidly for **40-50 strokes (a stroke is one complete in and out cycle). DO NOT MIX LONGER THAN 30 SECONDS.**
11. Push mixing rod all the way in, grasp cartridge firmly at the bottom, above the plunger, and **IMMEDIATELY UNSCREW MIXING ROD AND REMOVE. DO NOT DISCARD MIXING ROD.**
12. Screw cartridge onto the nozzle at the duct opening.
13. Inject the mixing liquid into the duct by pushing the plunger with the mixing rod.
14. After one minute, remove the cartridge and nozzle and dispose.

### WARNING

CONTENTS WILL DEVELOP INTERNAL PRESSURE AFTER MIXING. REMOVE MIXING ROD IMMEDIATELY AFTER MIXING TO PREVENT PRESSURE BUILDUP AND POSSIBLE SUDDEN ERUPTION.

Contains isocyanate. May be skin and respiratory sensitizer. May cause irritation of eyes, skin, nose and throat. Do not breathe vapors. Use with adequate ventilation. Avoid contact with eyes, skin and clothing. Wear protective gloves and safety glasses.

**FIRST AID:** In all cases, obtain appropriate medical attention immediately.

**INHALATION:** Move to fresh air. **INGESTION:** Do not induce vomiting. Drink water.

**EYES:** Flush open eyes with water for 15 minutes. **SKIN:** Wash with soap and water.

REFER TO SAFETY DATA SHEET.  
FOR INDUSTRIAL USE ONLY. KEEP OUT OF REACH OF CHILDREN

RAMBOW